

Key (Button)	Format	Code	
		Customer	Data
TUNER	NEC	846C	847B
LINE-1			857A
LINE-2			8679
LINE-3			8778
LINE-BAL			C43B
CD			807F
CD-BAL			817E
AD			827D
TAPE-1			837C
TAPE-2			C03F
ATT			CF30
VOLUME +			C23D
VOLUME -			C33C

Key (Button)	Format	Code	
		Customer	Data
1	NEC	846C	9C63
2			9867
3			946B
4			906F
5			9D62
6			9966
7			956A
8			916E
9			9E61
10			9A65
11			9669
12			926D
13			9F60
14			9B64
15			9768
16			936C
MEMORY			DC23
DOWN			D42B
UP			D02F
SELECTIVITY			DD22
METER	D926		
FILTER	DE21		
MUTING	DA25		
MONO	D629		

Accuphase

RC-10

C-250 / C-275 / E-406

Key (Button)	Format	Code	
		Customer	Data
CD	NEC	846C	807F
CD (BALANCED)			817E
TUNER			847B
AD			827D
LINE-1			857A
LINE-2			8679
LINE-3			8778
LINE (BALANCED)			C43B
VOLUME +			C23D
VOLUME -			C33C

Accuphase

RC-18

DP-55, DP-55V, DP-57, DP-65V, DP-67

Key (Button)	Format	Code	
		Customer	Data
CD/PROC	NEC	836B	CF30
OPTICAL			DE21
COAXIAL			DF20
1			8C73
2			8877
3			847B
4			8D72
5			8976
6			857A
7			8E71
8			8A75
9			8679
0			827D
+20			807F
+10			817E
OPEN/CLOSE			CD32
LEVEL+			D22D
LEVEL-			D32C
PLAY/PAUSE			8F70
<< TRACK			8778
TRACK >>			8B74
STOP			CE31
←INDEX			C936
INDEX→			C53A
<< FR			C837
FF >>			C43B
TRACK/INDEX			C13E
REPEAT ALL			CA35
REPEAT ONE			C639
REPEAT A<->B			C23D
TIME			C03F
PROGRAM PROG			CB34
PROGRAM CHECK	C738		
PROGRAM CLEAR	C33C		