

Key (Button)	Format	Code	
		Customer	Data
TO	NEC	B649	1EE1
CHECK			1BE4
CLEAR			1AE5
OPEN/CLOSE			10EF
TRACK			44BB
PGM			45BA
TIME			46B9
SINGLE			47B8
REPEAT			19E6
SPACE			42BD
DISPLAY/TIME			18E7
1			01FE
2			02FD
3			03FC
4			04FB
5			05FA
6			06F9
7			07F8
8			08F7
9			09F6
0			00FF
+10			0AF5
+20			0BF4
+30			0CF3
+40			0DF2
+50			0EF1
INDEX ←			1CE3
INDEX →			1DE2
MUSIC SKIP <<			16E9
MUSIC SKIP >>			17E8

MANUAL SEARCH <<	14EB
MANUAL SEARCH >>	15EA
STOP ■	11EE
PLAY/PAUSE >/	13EC

KENWOOD RC-T0600 KT-6050

Key (Button)	Format	Code	
		Customer	Data
ACTIVE RECEPTION	NEC	B548	1AE5
ANT A/B			0CF3
RF ATT			1CE3
IF BAND			40BF
PROG			4CB3
MODE			18E7
1			01FE
2			02FD
3			03FC
4			04FB
5			05FA
6			06F9
7			07F8
8			08F7
9			09F6
0			00FF
+10			0AF5
MEMORY			4BB4
DISPLAY			8C73
BAND			12ED
AUTO/ MANUAL			19E6
PRESET △			17E8
PRESET ▽			16E9
TUNING △			15EA
TUNING ▽			14E8
POWER			5FA0

KENWOOD RC-T6040 KT-6040

Key (Button)	Format	Code	
		Customer	Data
ACTIVE RECEPTION	NEC	B548	1AE5
RF SEL.			1CE3
IF BAND SEL.			40BF
MODE			18E7
PROGRAM			4CB3
SET			52AD
CHARACTER			54AB
DIGIT			55AA
1			01FE
2			02FD
3			03FC
4			04FB
5			05FA
6			06F9
7			07F8
8			08F7
9			09F6
0			00FF
+10			0AF5
MEMORY			4BB4
BAND			12ED
AUTO/MANU			19E6
DISPLAY MODE			8C73
PRESET △			17E8
TUNING △			15EA
POWER			5FA0
PRESET ▽	16E9		
TUNING ▽	14E8		