

Key (Button)	Format	Data
tape/source	AEHA	0220A008963E
counter reset		0220A00854FC
counter mode		0220A00855FD
memory repeat		0220A00848E0
memoru stop		0220A008872F
open/close		0220A00801A9
auto rec mute		0220A008822A
pause		0220A00806AE
<<rew		0220A00802AA
>>ff		0220A00803AB
stop		0220A00800A8
>play		0220A0080AA2