

SANSUI

RS-1110

CD- $\alpha$ 717D EXTRA/LTD

Key (Button)	Format	Code	
		Customer	Data
10KEY MODE	NEC	BA45	2CD3
OPEN/CLOSE			59A6
1			41BE
2			42BD
3			43BC
4			44BB
5			45BA
6			46B9
7			47B8
8			48B7
9			49B6
10			4AB5
0			40BF
+10			4BB4
PROGRAM SET			5AA5
PROGRAM CHECK			5BA4
PROGRAM CLEAR			5FA0
COMPUEDIT			2AD5
REPEAT 1/ALL			24DB
REPEAT MULTI			26D9
REPEAT START			27D8
A.PAUSE/SPACE			28D7
DISPLAY MODE			29D6
DISPLAY ON/OFF			2BD4
RANDOM			5CA3
M.SCAN			5EA1

FR <<	57A8
FF >>	58A7
STOP	1AE5
INDEX <	23DC
INDEX >	22DD
PAUSE	21DE
AMPS  <<	18E7
AMPS >>	19E6
PLAY >	20DF