

YAMAHA

RS-CDX1000

CDX-1000

Key (Button)	Format	Code	
		Customer	Data
OPEN/CLOSE	NEC	7986	01FE
TAPE			57AB
MAN'L			0CF3
DEL			0EF1
AUTO			1BE4
CANCEL			0DF2
Hi-Bit DIRECT OUT			58A7
+10			1AE5
0			10EF
1			11EE
2			12ED
3			13EC
4			14EB
5			15EA
6			16E9
7			17E8
8			18E7
9			19E6
10			40BF
11			41BE
12			42BD
13			43BC
14			44BB
15			45BA
16	46B9		
17	47B8		
18	48B7		
19	49B6		
20	4AB5		
21	4BB4		
22	4CB3		
23	4DB2		
24	4EB1		

TIME DISP	0AF5
REPEAT S/F/OFF	08F7
REPEAT A-B	09F6
INDEX	0BF4
SEARCH <<	05FA
SEARCH >>	06F9
SKIP <<	04FB
SKIP >>	07F8
STOP □	56A9
PAUSE 	55AA
PLAY >	02FD
OUTPUT LEVEL DOWN	1CE3
OUTPUT LEVEL UP	1DE2

YAMAHA

RS-TX2000

TX-2000

Key (Button)	Format	Code	
		Customer	Data
P1-8/P9-16/P17-24	NEC	D12E	0DF2
P1/9/17			0EF1
P2/10/18			0FF0
P3/11/19			10EF
P4/12/20			11EE
P5/13/21			12ED
P6/14/22			13EC
P7/15/23			14EB
P8/16/24			15EA