
Usuer Manual

SKU: **JS-5974**

Features

①(Rod antenna): Pulling out the radio when listening to FM/SW is better.
②(USB) interface: Insert the U disk to play the music in the U disk.
③(TF) Slot: Insert the TF card to play the music in the TF card.
④(DC 5V) charging interface: external 5V = 1000mA output adapter for charging.
⑤ Headphone jack: External 3.5 headphone (universal mobile phone headset).
⑥(0N/0FF) Power switch: 0N machine is turned on and 0FF machine is turned off.

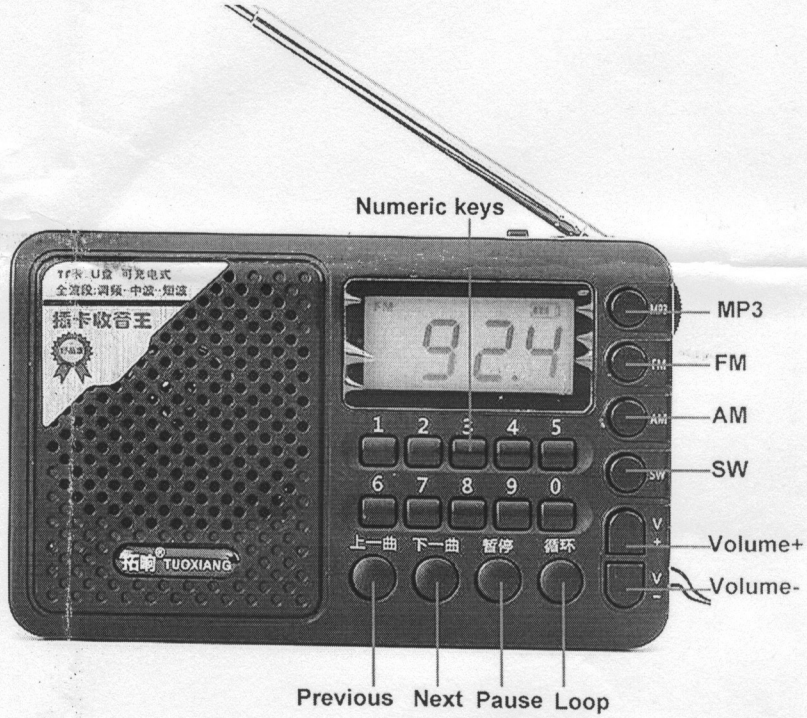

Key Function

①TUNING, fine-tune all radios and frequencies.
②(MP3) key. First load the music TF card/music U disk, put the battery in and turn the power switch to ON, press the MP3 button once to switch music between TF and U disk.
③(FM)/(AM)/(SW) button, pull up the antenna and press and hold the button for 1-2 seconds. Carry out automatic retrieval of radio stations, each time a radio station is detected, the machine will automatically store one until the frequency range radio station is retrieved.
④(V+/V-) key, short press V+ once to increase the sound by one step, long press to increase the sound continuously. Short press V-The sound decreases by one stop, and long press the sound continuously decreases.
⑤ (Loop) key. It is only useful when playing MP3. When playing a single song, short press the "Cycle" button once. The LCD displays "ONE", and the function is a single loop. Press it again,and the LCD displays "ALL" to cycle through all the tracks.
⑥(Pause) key, effective for both radio function and MP3 play, short press once to pause the program, and short press again to resume the previous program.
⑦(Next song)/(Previous song) button, short press once when MP3 is playing, the music program will enter "next song"/"previous song". When entering the radio program, short press once "next song" Song", "Previous Song". The product will enter the next/previous station of the locked program, long press the back to retrieve the station.
⑧(0-9) key, when the product plays a radio station program, press any combination of 0-9 numbers to enter the station that has been searched and locked. In the radio mode, you can directly select the frequency number to tune the station, such as: press 875, the LCD displays 0875, and immediately jumps to the 87.5 frequency.

Precautions for use

1. When using AM or SW indoors, please try to be as close to the window or terrace as possible, so that the radio effect will be better. Using it while charging will affect the sound quality.
2. In order to ensure the quality of use, please charge in time when the battery is low.
3. If the machine is not used for a long time, please remove the battery or charge it at least once a month.
4. When inserting the battery, pay attention to the correct direction of the positive and negative electrodes. If the battery is installed in reverse, please remove the battery as soon as possible. If the battery is improperly replaced, there is a danger of explosion.
5. Only replace the battery with the same or equivalent type. Please use batteries produced by regular factories.
6. Keep away from high temperature, fire source and humid environment.
7. It can be charged with 3. 7V 18650 lithium battery, but cannot be charged with R6P SIZE AA 1. 5V 3 AA dry batteries